



Ground battery cable location

Top view of the ski

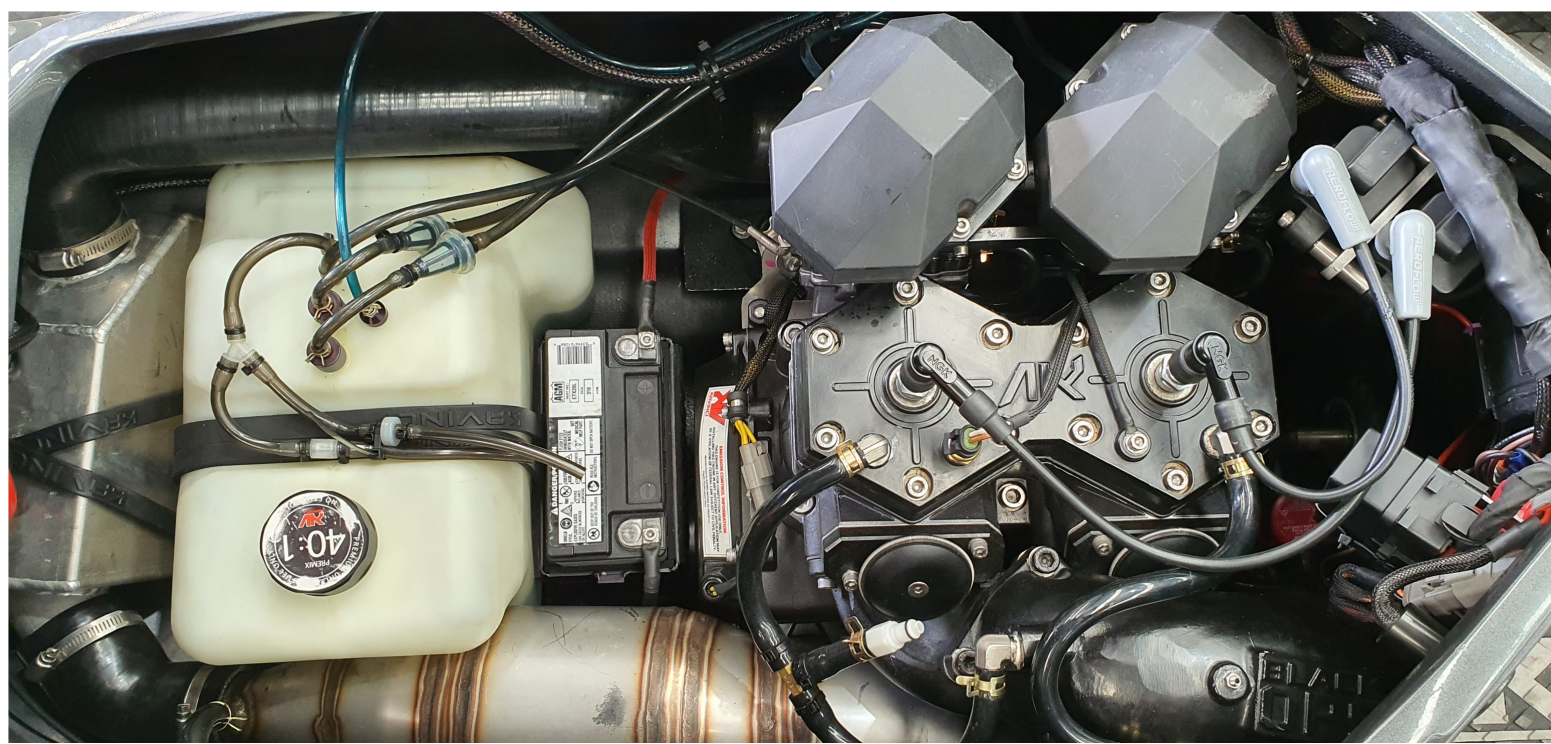

The Battery cable is going from the (-) side of the battery to the back of the starter motor.
The green arrow indicates the “C-Pipe”.

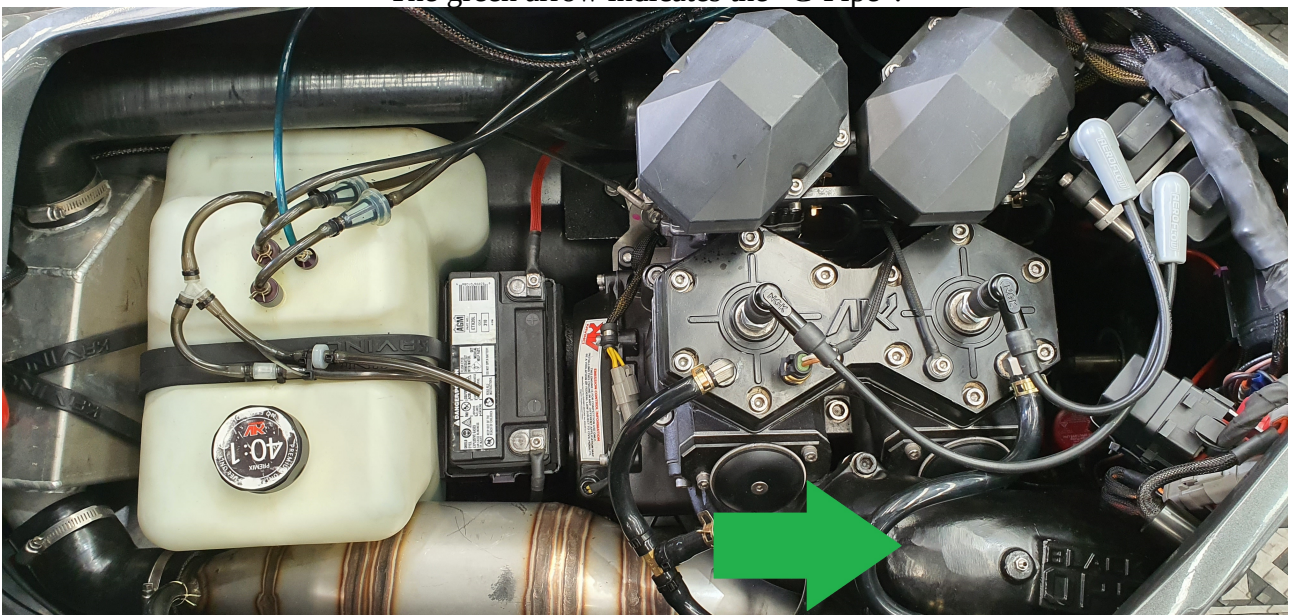


Under this C-Pipe, bolted to the engine is located the starter motor

The blue arrow indicates the location on the starter motor on the engine with the C-Pipe removed.



Rounded the starter motor

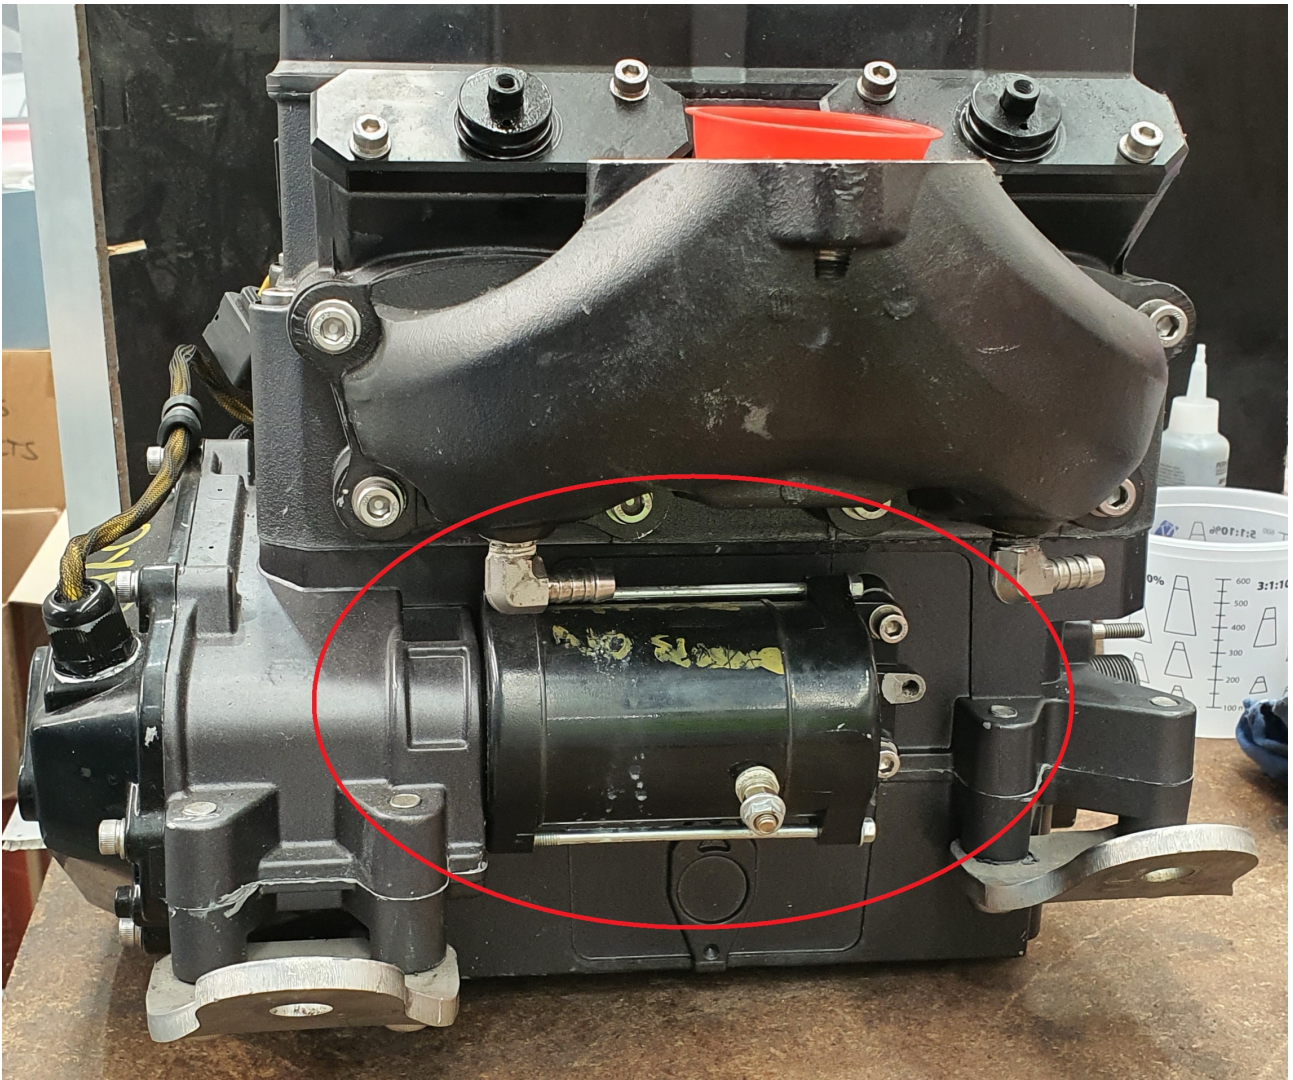

On the back of the starter need to be bolted the ground Battery cable coming from the Negative of the Battery, rounded in Purple.

